



Dr Z 1x10 ext. cab to combo cab conversion

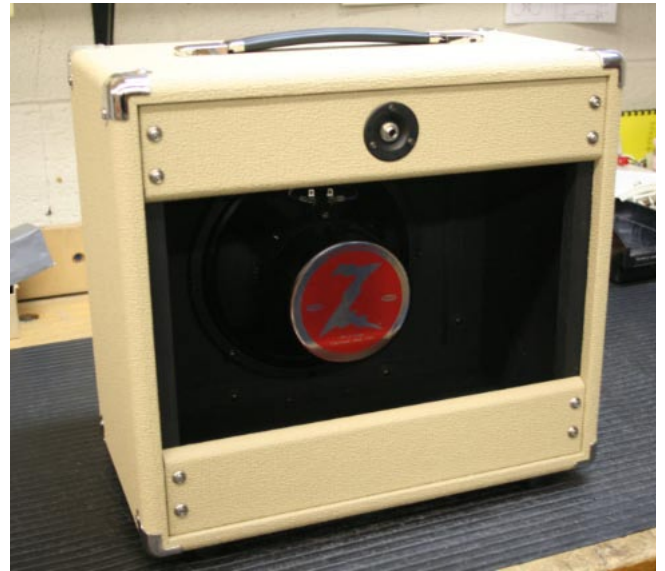

1. Undo speaker jack and remove from jack plate.



2. Unscrew upper rear panel and set aside.

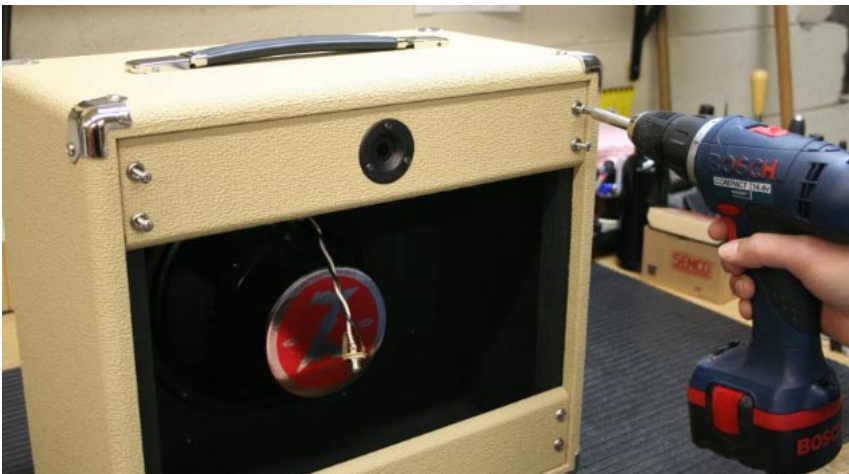


4. Remove the 2 upper side blocks on either side of the cabinet.



5. Remove front upper panel (6 screws)



This should be what you have at this point:

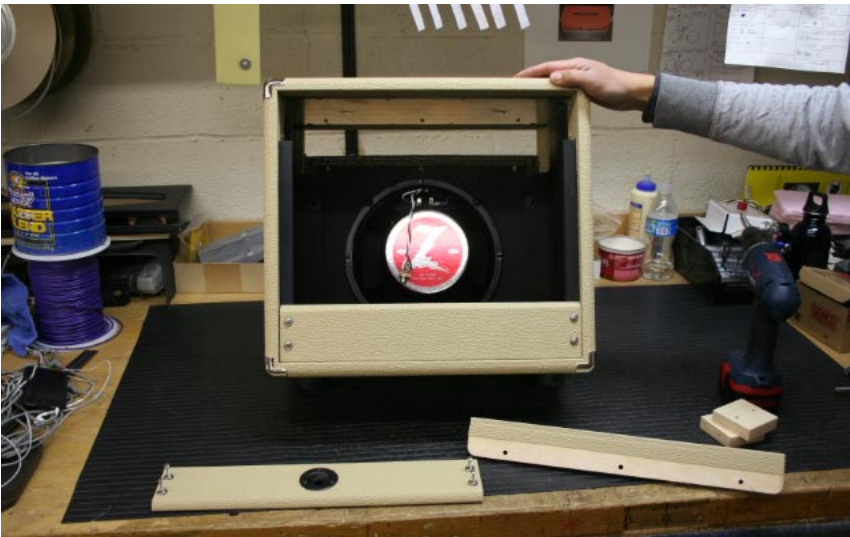

6. Use an Exacto knife to cut out the 4 chassis mounting holes on top of the cab. These holes are already drilled.



7. Lay cabinet flat and position upper back panel even with the side mounting rails. Drill out 4 pilot holes using 1/8" drill bit. Set panel aside.



8. Mount chassis using the 4 screws from your old head or combo.



9. Attach upper back panel and 1/4" jack. You may choose to use a short speaker cable to connect the jack and chassis. You may also install a new speaker lead with a 1/4" plug to go directly from the speaker to the chassis.

